

Uninstall

Currently the Linux driver uninstall is a manual process by performing the following steps:

1. `sudo rm -rf /opt/updd`
2. `sudo rm /etc/xdg/autostart/updd*`
3. edit `/etc/gdm/PostLogin/Default` removing any updd items towards the end of the file (there may be none)

Touch-Base Support

<http://support.touch-base.com/Documentation/50374/Uninstall>