

## Hardware Interfaces

UPDD V6 supports USB and RS232 devices and can be made to work with i2c devices as discussed in the following articles:

Touch-Base Support

<http://support.touch-base.com/Documentation/50448/Hardware-Interfaces>