

Uninstall

To uninstall the driver software you need to manually reverse the installation procedure as follows:

Open the [terminal emulator](#) and enter these commands:

```
su
```

```
mount -o remount,rw /system
```

```
rm -rf /system/vendor/updd
```

```
rm -rf /data/data/updd
```

```
rm /system/usr/idc/updd*
```

```
mount -o remount,ro /system
```

Remove any driver start up method you may have implemented.

Touch-Base Support

<http://support.touch-base.com/Documentation/50478/Uninstall>